

ALVA Air Fryer

Model	ALV01AF66	Rated Power	1050w
Protocol	WI-FI	Capacity	5L
Rated Voltage(V)	220v&110V	Product Size	2840*3710*3370 mm

Description

ALVA AIR FRYER used to make fried foods such as meat, chicken, and potato chips with a penetrate glass and also have Nano ceramic coated. You can cook your food fresh and healthy with nonstick surface and easy clean.

It has led touch control screen, you can set cooking time and temperature support alva app



pairing method

App Method

There are two pairing methods for pairing with the receiver and the wireless kinetic switch

- Ordinary pairing
- Directional pairing.

Physical button Mode

1 - Press the button for 3 seconds, the light will enter a slow flashing state (1 flash in 1 second),

2- the receiver enters the status of "waiting for pairing".

3- At this time, press the button of the wireless switch that needs to be paired once, and the light is off, it means that the pairing is completed.

Note: - After the pairing is completed, long press button to cycle dimming.

- If keep pressing the button, the brightness of the light will cycle from the darkest to the brightest for two cycles.

- it will stop when the brightness is maximum.

4- Long press for circular dimming, if the time interval between two long presses for dimming is less than 1 second, the dimming direction (brighter or darker) will be reversed



How to install



unpair method

Cancel pairing with wireless

App Method

- 1- Enter the App page, click "Pairing" -> "Clear Pairing", and select the corresponding channel.
- 2- After the clearing is completed, the app will prompt "Clearing Successful".

Physical button Mode

- 1- Press the button for 12 seconds, the light will flash-still-off, and then release the button, all information for the wireless kinetic switch that matched with this channel will be cleared.

Clear Network

App Method

- 1- Enter the App page, click "Pairing" -> "Clear Pairing", and select the corresponding channel. After the clearing is completed, the app will prompt "Clearing Successful".

Physical button Mode

- 1- Press the corresponding button of receiver for 12 seconds, the light will flash-still-off, and then release the button, all information for the wireless kinetic switch that matched with this channel will be cleared.

Bridging Mode

- 1- Press the button for 7 seconds, LED1 changes from slow flashing to fast flashing (2 flashes per second), and release the button when it flashes quickly, and the receiver enters the bridging mode.

- 2- At this time, the light flashes once every 2 seconds. If need to exit the bridging mode, just repeat the above steps



How to install

